


PRO-X SERIES | ULTRA SERIES | SPECIAL & SPECIAL-ULTRA SERIES | DELUXE SERIES

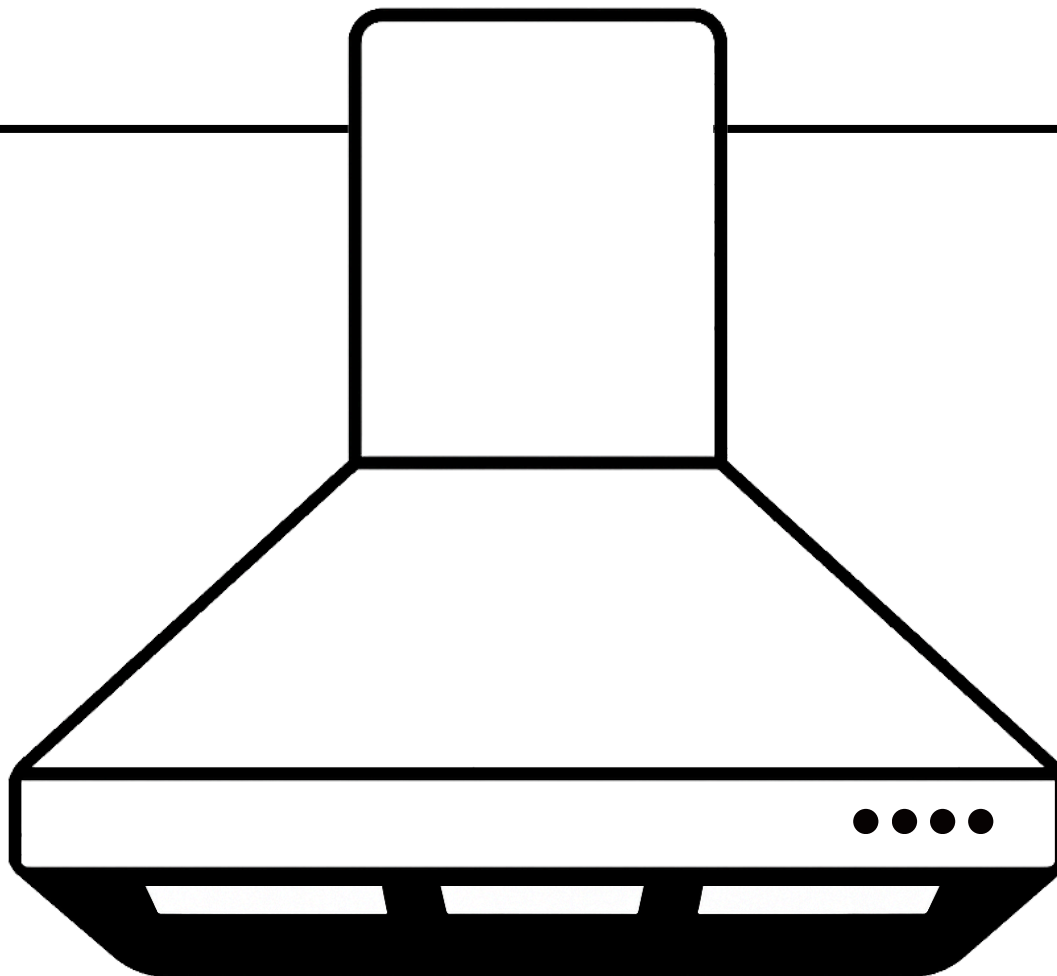

# INSTALLATION & USER MANUAL

FOR WALL MOUNTED RANGE HOODS

[XtremeAIRusa.com](http://XtremeAIRusa.com)

# Need Assistance?

At XtremeAIR USA, we're committed to ensuring your satisfaction and providing you with exceptional support. If you have any questions or need assistance during installation or use, please don't hesitate to contact our customer support team.



XtremeAIRusa.com

WARRANTIES & SUPPORT  
Support@XtremeAIRusa.com

SALES & DEALERS  
Sales@XtremeAIRusa.com

(714) 554 9000



## TABLE OF CONTENTS

SUPPORT, TABLE OF CONTENTS, SAFETY INSTRUCTIONS	2
MOUNTING HEIGHT AND VENTING METHODS	3
PARTS LIST	4
PREPARATION & HOOD DIMENSION GUIDE	5
INSTALLATION	6
INSTALLATION	7
INSTALLATION & PANEL CONTROL GUIDE	8
LIGHT BULB REPLACEMENT & TROUBLESHOOTING	9
CARE & MAINTENANCE	10
LIMITED WARRANTY INFORMATION	11

The safety instructions and warnings provided in this manual do not cover every possible situation that may arise during the installation, operation, or maintenance of this appliance. Please exercise extreme caution at all times. If you have any questions or encounter any issues you do not fully understand, contact the XtremeAIR USA Customer Support Team at 714.554.9000 or email us at [Support@XtremeAIRusa.com](mailto:Support@XtremeAIRusa.com). **The manufacturer is not responsible for any damage or injury resulting from failure to follow the installation instructions provided in this manual.**



### WARNING

**WARNING & DISCLAIMER:** To avoid the possibility of an explosion or fire, do not store or use combustible, flammable or explosive vapors and liquids (such as gasoline) inside or in the vicinity of this or any other appliance. Keep all combustible items (such as aerosol cans) away from cook top burners, ovens and range hoods. Do not store flammable or explosive materials in adjacent cabinets or surrounding areas. **The manufacturer and/or distributor/seller decline all responsibility in the event of failure to observe the instructions provided for installation, maintenance, and suitable use of the product. Manufacturer shall NOT be responsible for any injury due to negligence and the warranty of the unit shall automatically be voided due to failure to observe proper safety and installation procedures. Manufacturer will not be held responsible for any damages to personal property, real estate, or any bodily injuries whether caused directly or indirectly by the range hood.** \*Use this unit only in the manner intended by the manufacturer. If you have questions, contact XtremeAIR. Do not remove permanently affixed labels, warnings or plates from the product. This may void the warranty. Do not modify the hood. "Failure to follow installation instructions may void your warranty"

**INSTALLATION** must be done by qualified professionals, in compliance with all applicable codes and fire safety standards. Avoid damaging electrical wiring or utilities when cutting or drilling. Use two or more people for installation. Edges may be sharp—wear protective gloves when handling parts. Read all instructions before beginning.


**VENTING** with kitchen ranges or cooktops only. Do not use to vent hazardous or explosive materials. Ducted fans must be vented outdoors—never into walls, crawl spaces, ceilings, attics, or garages. Use metal ductwork only. Clean or replace old ducts to prevent grease fires. Tape joints securely.

**ELECTRICAL** must be properly installed, insulated, and grounded. Turn off power and unplug before servicing or cleaning.

**OPERATION** only with caution. Keep fans, baffle filters, oil containers, and all grease-laden areas clean. Do not block filters. Clean fans and filters regularly, remove obstructions.

**XtremeAIR**

# MOUNTING HEIGHT & VENTING METHODS

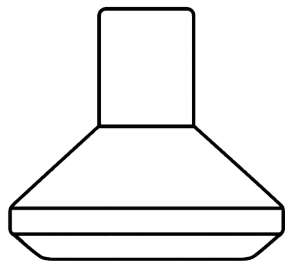


26"MIN - 30"MAX

**MOUNTING HEIGHT** FOR THE MOST EFFICIENT & QUIET OPERATION, a distance of **26" to 30"** is recommended between stove top and the bottom of range hood. If the hood is mounted too low this could result in heat and/or fire hazard. If the hood is mounted too high the controls will be hard to reach and the hood will lose its performance and efficiency.


**VENTING REQUIREMENTS:** It is strongly recommended to vent the range hood vertically through the roof using a minimum 6-inch diameter duct or larger. To maintain optimal airflow, minimize the number of transitions and turns in the ductwork whenever possible. For long duct runs, increase the duct diameter to 7 or 8 inches, and if a reducer is necessary, use a long reducer rather than a pancake-style one, as short reducers can significantly restrict airflow. The duct size should remain consistent throughout the entire run, and the system should include no more than three 90-degree elbows. If more than one elbow is used, ensure there is at least 24 inches of straight duct between them.

NEVER exhaust air into crawl spaces, wall cavities, ceilings, attics, or garages—exhaust must always be ducted directly to the outdoors. Plastic ductwork should not be used; only metal ventilation materials approved for kitchen exhaust systems are acceptable. Additionally, avoid using 4-inch laundry-type wall caps, as they are not suitable for range hood exhaust and will reduce performance.

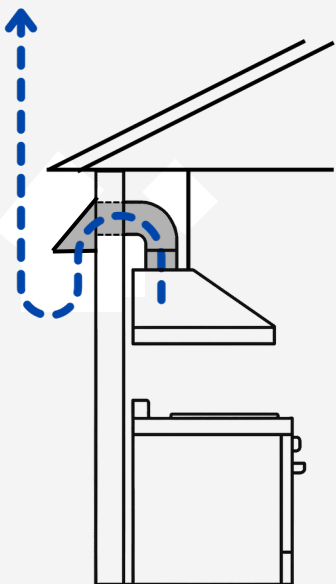


## BACK WALL VENTING

In this configuration, the ductwork runs vertically from the top of the range hood into the upper cabinet, then transitions with an elbow to run horizontally through the rear exterior wall. This setup offers the shortest duct path for optimal airflow performance.

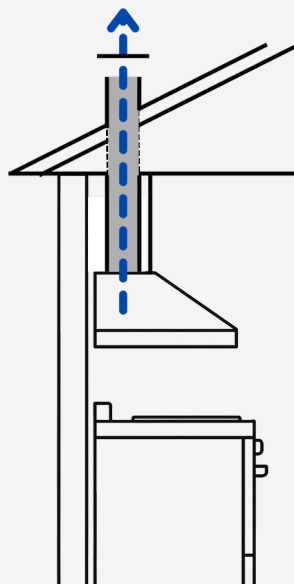

## ROOF VENTING


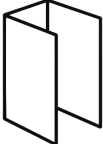
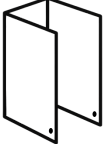
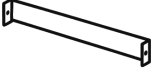


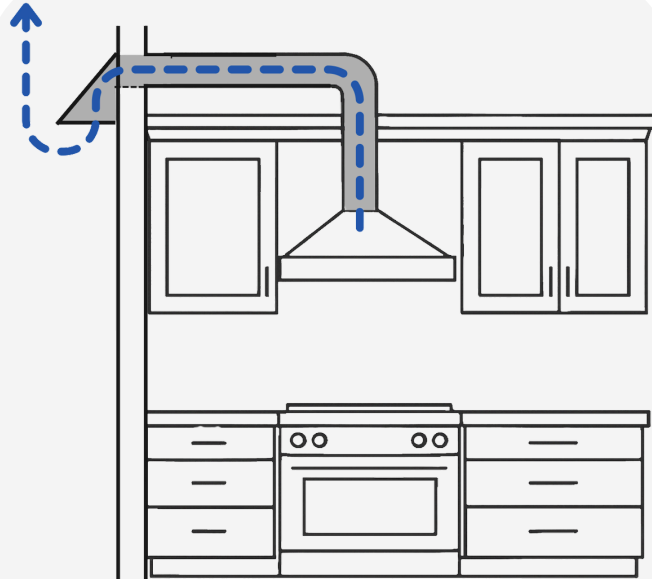







This configuration vents air directly upward from the top of the range hood, through the ceiling and out the roof. It provides a straight, vertical duct path with minimal resistance, making it the most efficient and highly recommended venting method.

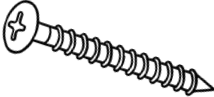

## SIDE WALL VENTING

In this setup, the ducting runs vertically from the top of the range hood through the kitchen ceiling, then turns to exit through a nearby exterior side wall. While effective, this method involves a longer duct path and more turns, which may slightly reduce airflow efficiency compared to other options.

# PARTS DIAGRAM



		SP01	PX02/UL02/PX15	PX06	DL02
MANUAL BOOK		1	1	1	1
UPPER CHIMNEY <i>Inner Position</i>		1	1	1	1
LOWER CHIMNEY <i>Outer Position</i>		1	1	1	1
CEILING MOUNTING BRACKET <i>Appearance varies</i>		1	1	1	1
BODY MOUNTING BRACKET <i>Appearance varies</i>		1 Attached	1	1 Attached	1 Attached
WALL ANCHOR <i>Appearance varies</i>		4	4	4	2
WALL ANCHOR SCREW		4	4	4	2
UPPER CHIMNEY SCREW		4 Attached	4 Attached	4 Attached	4
CANOPY GLASS <i>on select models</i>		1	–	–	–
BAFFLE FILTERS <i>Quantity varies by model</i>		2	3	2 Attached	2+
ALUMINUM PIPE		–	1	1	1
AIR DIVERTER		1 Attached	1	1 Attached	1 Attached
DUCT CLAMP		–	2	2	–
REMOTE CONTROL		1	1 Not included with UL02	1	1

# PREPARATION

**IMPORTANT ELECTRICAL REQUIREMENTS:** Observe all governing building codes and city ordinances. A 120-volt, 60 Hz. An AC, 15-amp outlet is needed (fused electrical circuit is required). It is the customer's responsibility to contact a qualified electrical installer and ensure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/ NFPA 70 — latest edition, or CSA Standards C22. 1-94, Canadian Electrical Code, Part 1 and C22. 2 No. 0-M91 - latest edition and all local codes and ordinances.


**TOOLS AND PARTS YOU'LL NEED:** Gather all necessary tools before starting to ensure a smooth and safe installation:

**OPTIONAL:** Not required, but recommended for easier installation:

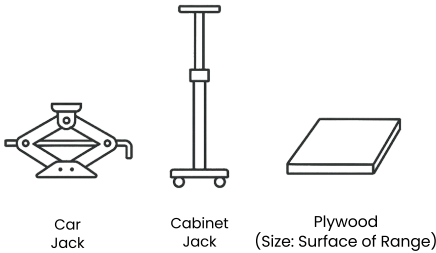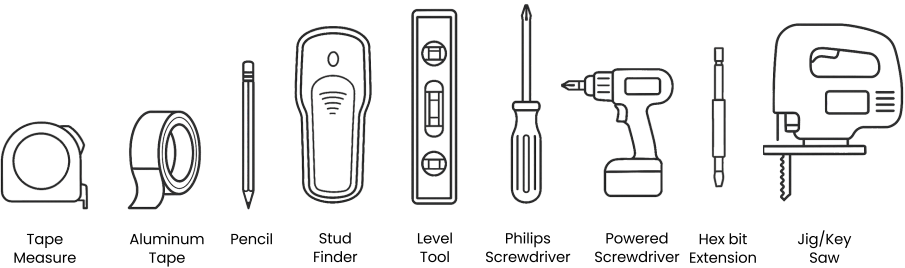


## HOOD DIMENSION GUIDE


Depth dimensions may vary depending on manufacturing date.

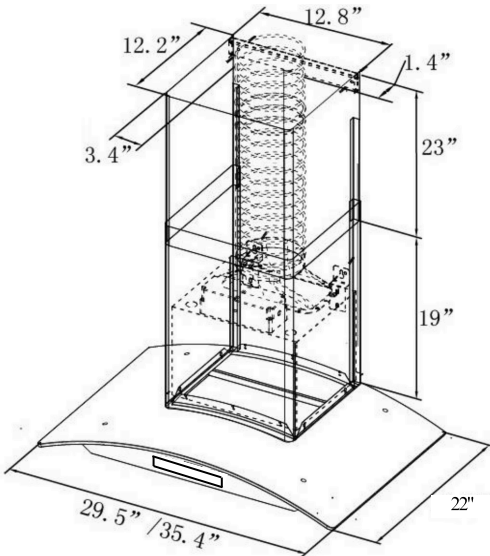


SP01-W30/36

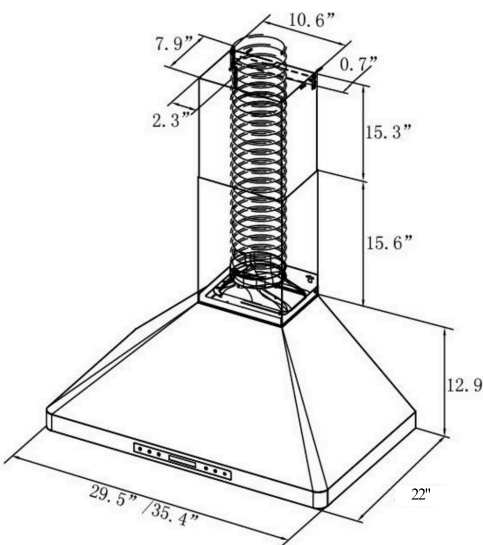

PX02-W30/36, UL02-W30/36, DL02-W30/36

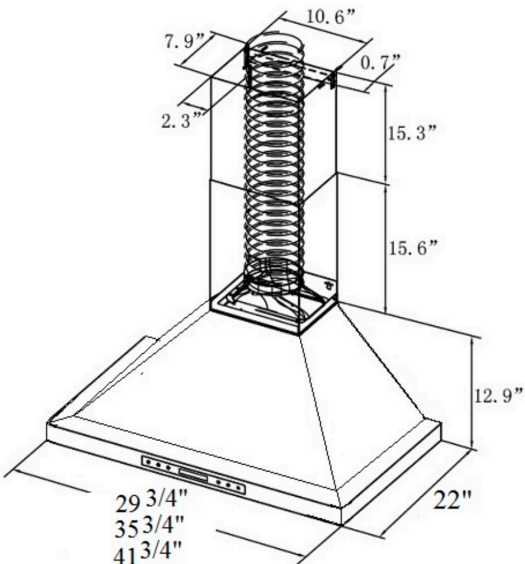

PX15-W30/36/42

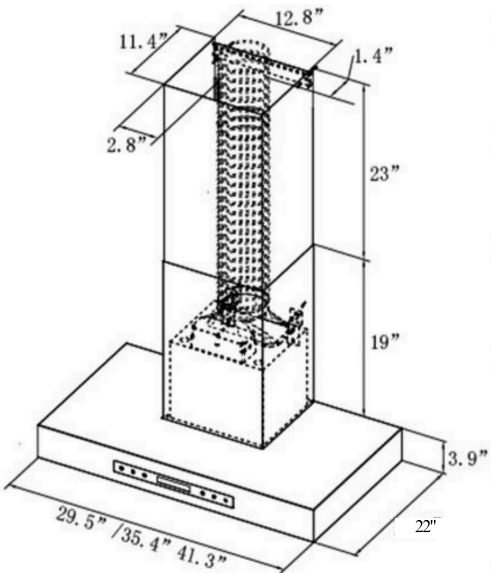

PX06-W30/36/42

**XtremeAIR**

# INSTALLATION

## **STEP 0: Installation Video**

Please refer to our installation video for a more visual, convenient method of installation. Feel free to refer back to this manual as well. Contact our support team if you get stuck, we are happy to help!  
Support@XtremeAIRusa.com



Refer to all safety guidelines, during installation. Refer to manual and local ordinances for details.

## **STEP 1: CREATE WORK STATION**

Place 2 pieces of wood about 2" x 4" x 20" on both sides of stove & a plywood plank on top of them to protect cook top or stove from damage or dirt. This plywood will also create a comfortable work station for easy installation.



Creating a work station is optional. Otherwise, cover range with a thick tarp to protect from damage and dirt

## **STEP 2: MARK WALL**

Center: the center of cook top or stove.


Chimney width: the width of the chimney  
(Varies with each model).

Mounting screws: where the hood body will be positioned.

For PX02, please assemble body mounting bracket to the back of hood body first, to find placement location by removing 6 screws located on the back of the hood, place screws back at the end of the process. Dimensions are:

**WIDTH:** dimension from center to center of mounting bracket hole.


**HEIGHT:** dimension from cook top to bottom of range hood (26"-30") plus amount from bottom of range hood to the mounting bracket hole.

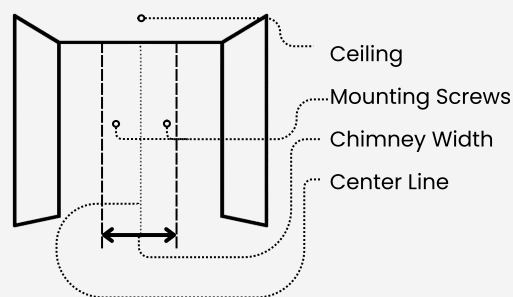

## **STEP 3: PREPARE DUCTWORK & SINGLE OUTLET**

**A.** Have 15amp, 120V, 60Hz, outlet anywhere inside chimney width lines (>2 inches below ceiling line for ceiling bracket)

**B.** Have 6 or 8 inch diameter ductwork (depending on model) brought down from ceiling to about the mark of mounting screws (1-2 inches away from wall to give room to plug in the unit).

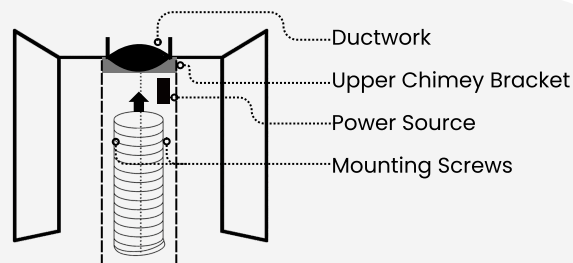

## **STEP 4: PREPARE DUCTWORK & SINGLE OUTLET**

**A.** Place center of ceiling mount bracket in line with center line and all the way up to the ceiling. Once in place, secure with screws. **B.** Pre-drill holes (1/8") where your mounting marks are. **C.** Slowly tighten wall anchors (2 total) until it is flush with the wall surface. **D.** Insert mounting screws inside the wall anchors then slowly tighten it down. Make sure to leave about 1/8" space away from the wall to the inside screw's head.



# INSTALLATION


## STEP 5: HANG THE HOOD & CONNECT

- A.** Carefully lift and hang the hood body on the wall, attaching it to 2 mounting screws already in place.
- B.** Level the hood body by using horizontal level
- C.** Use hand screw driver to tighten those 2 mounting screws
- D.** Connect the exhaust on the hood to the ductwork above.
- E.** Use aluminum tape to make all joints secure and tight
- F.** Find the three pronged plug and connect to an electrical outlet

**CAUTION:** Do not release the hood until you finish step 6 below.


**NOTE:** FOR PX02/UL02 & PX15: please put on top of hood body in this order:

- 1. U bracket (leave foam tape strips on top of hood.)**
- 2. Rubber gasket**
- 3. Air Diverter**

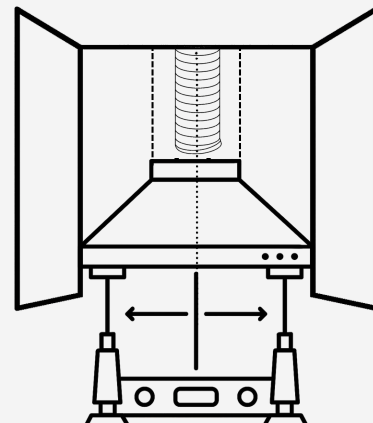


## STEP 6: SECURE HOOD BODY & TEST RUN

- A.** Use a stud finder to find all studs below the hood body. Put blue tape on every stud found. **B.** Use 1/8" drill bit to drill through the back of hood in line with blue tape.
- C.** Secure the hood body by using the 2.0 inches wood screws (provided) through the back of hood to the stud. **D.** Refer to the PANEL CONTROL GUIDE section to perform a test run after plugging the unit in.

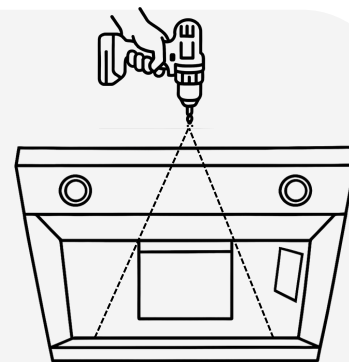


## STEP 6E: SP01 ONLY

- E1.** Loosen the four canopy screws and washers from the hood top.
- E2.** Carefully place the canopy glass on the hood top then slightly tighten the four canopy screws along with washers. DO NOT put excessive pressure against the glass.

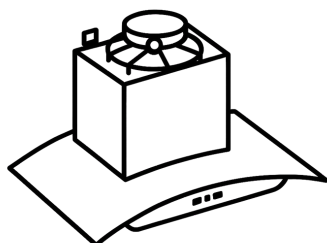


## STEP 7A: INSTALLING CHIMNEYS

- A.** Remove outer chimney protective film (not the inner chimney). **B.** Place both chimneys on top of range hood base. **C.** Secure outside chimney to the base of the hood (PX02 & DL08)

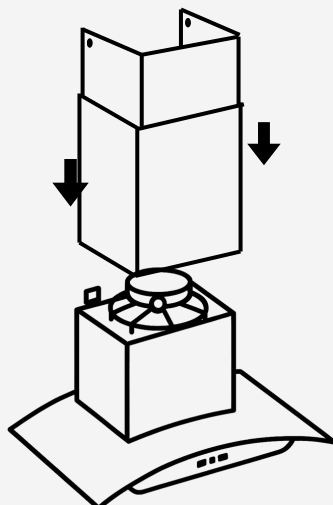

## STEP 7B: INSTALLING CHIMNEYS


- A.** Lift up and attach the inner chimney to the ceiling mounting bracket. **B.** Screw the chimney into place on both sides. **C.** Remove inner chimney protective film.

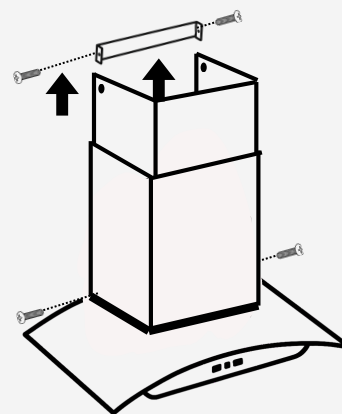

# INSTALLATION

## STEP 8: INSTALL OIL DRIP TRAY

Place oil tunnel into recess support near the rear of the hood. Refer to the right picture. Some models may hook to the bottom of the hood.

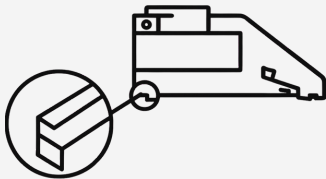

Tall Side To the back


## STEP 9: INSTALL BAFFLE FILTERS

- 1.Angle baffle filter toward back of hood.
  - 2.Lift baffle filter up above horizontal level.
  - 3.Slide away into slot behind front of hood.
  - 4.Slide the installed baffle filter left or right.
  - 5.Repeat step 1 -4
- NOTE: The middle filter must be installed last and removed first




# PANEL CONTROL GUIDE

## DIGITAL TOUCH PANEL

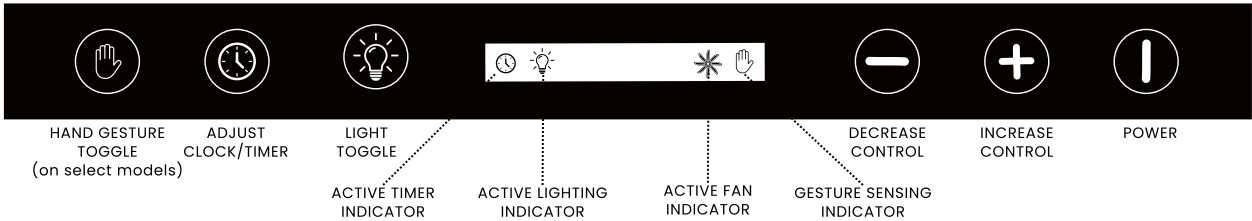

- Clock & Delay Timer**  
Clock Button & Delay Timer Button: Set the clock: Touch the clock symbol with the fan off. The time on the display will blink. Adjust the hours with the (+) and (-) buttons. Adjust the minutes with the clock symbol again. After 3 seconds, the time will save. The clock is in 12-hr format. Delay Timer: Touch the clock symbol with the fan running. The default delay timer is 1 minute. Increase or decrease the timer duration up to 15 minutes with the (+) and (-) buttons.
- Minus (-) Button**  
Quick high speed on: When the unit is off, touch the (-) button once as a shortcut to turn on the fans with high speed setting.
- Plus (+) Button**  
Quick low speed on: When the unit is off, touch the (+) button once as a shortcut to turn on the fans with low speed setting.
- Light Toggle**  
Touch to turn lights on / off
- Power Button**  
Touch to turn unit on / off. Toggling will turn on/off backlit clock display.

## MECHANICAL CONTROL PANEL

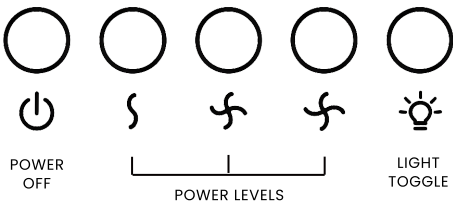


- Power**  
While the blower (motor) is running, press button to turn off the motors.
- Power Level**  
Press your desired speed (1, 2, 3)
- Light Toggle**  
Press the button once to turn on the light, then press it again to turn the light off.




# LIGHT BULB REPLACEMENT


## GU-10 LIGHT BASE

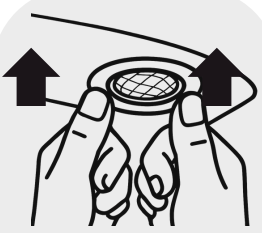


Slightly press inward on the GU10 bulb using both thumbs

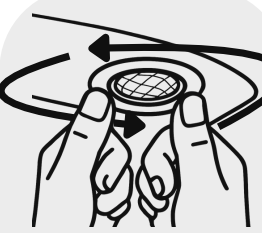


Keep your thumb grip and pressure constant as you turn the bulb counterclockwise.



Pull the bulb straight out of the socket




Align the new light bulb's legs with the 2 socket base slot holes

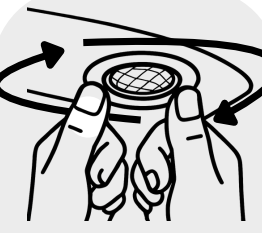

Press the new bulb inward into the socket, replacing the old one. Twist it clockwise until it's fully seated, then turn the lights back on.

## NON- GU-10 LIGHT BASE

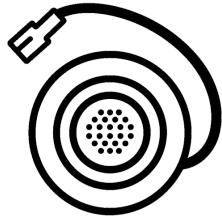

**Replacement Process Varies by Model**  
Depending on your model, the process of changing the lights varies. The general process is to remove the baffle filters, remove the shroud that carries the lights via 2 or more screws on the steel plate, and removing. The lights are connected to the circuit board and transformer (if applicable) with an easy-release white clip. Bulbs are plug-and-play. Ensure the replacement bulbs match the specified wattage and voltage. If you encounter issues, please contact our support team.  
[Support@XtremeAIRusa.com](mailto:Support@XtremeAIRusa.com)

# TROUBLESHOOTING

<b>Range hood or lights do not operate after installation</b>	Check if the range hood has been plugged in. Make sure that all power has been turned back ON. Swap out light assembly to working ones to determine whether it is caused by defective bulbs.
<b>The range hood vibrates when the blower is on</b>	The range hood might not have been secured properly to the cabinet or wall. Check if the blower wheel is damaged.
<b>The blower or fan seems weak</b>	Check that the duct size used is at least 6". Range hood WILL NOT function efficiently with an insufficient duct size & if it is loosely secured. Check if the duct is clogged or if the damper unit (half-circular flapper) is not installed correctly or opening properly. A tight mesh on a side wall cap unit might also cause restriction to the airflow.
<b>The lights work but the blower is not spinning at all, is stuck or is rattling</b>	The blower might be jammed or scraping the bottom due to shipping damage. Please contact us immediately.
<b>The hood is not venting out properly</b>	Make sure the distance between the stovetop and the bottom of the hood is within 26" and 30" in distance. Reduce the number of elbows and length of ductwork. Check if all joints are properly connected, sealed, and taped. Make sure the power is on high speed for heavy cooking.
<b>The hood is noisier than normal</b>	Check if the damper is not opened; if the duct is not secure, it will cause a vibration. Check if a smaller duct size than required is being used. The larger the duct, the quieter the performance.

# CARE & MAINTENANCE

## Operation

- Read and understand all instructions and warnings in this manual before operating the appliance. Save these instructions for future reference.
- Always leave safety grills and filters in place. Without these components, operating blowers could catch on to hair, fingers, and loose clothing.
- NEVER dispose of cigarette ashes, ignitable substances, or any foreign objects into blowers.
- NEVER leave cooking unattended. When frying, oil in the pan can easily overheat and catch fire. The risk of self-combustion is higher when the oil has been used several times.
- NEVER cook on "open" flames under the range hood. Check deep-fryers during use: Superheated oil may be flammable.

## Cleaning

- The saturation of greasy residue in the blower and filters may cause increased inflammability. Keep the unit clean and free of grease and residue buildup at all times to prevent possible fires.
- FILTERS MUST BE CLEANED PERIODICALLY AND FREE FROM ACCUMULATION OF COOKING RESIDUE.
- Do NOT operate blowers when filters are removed. Never disassemble parts to clean without proper instructions.
- Disassembly is recommended to be performed by qualified personnel only. Read and understand all instructions and warnings in this manual before proceeding.

## MAINTENANCE

- **SAFETY WARNING:** Never put your hand into the area housing the fan while the fan is operating! For optimal operation, clean the range hood and all baffles/spacers, filters, grease tunnel, and oil containers regularly. Regular care will help preserve the appearance of the range hood.
- Cleaning Exterior surfaces:
- Clean periodically with stainless steel cleaner or hot soapy water and a clean cotton cloth. Do NOT use corrosive or abrasive detergents (e.g. Comet Power Scrub®, EZ-Off® oven cleaner), steel wool/scouring pads, which will scratch and damage the stainless steel surface. For heavier soil, use liquid degreasers such as "Formula 409®" or "Fantastik®" brand cleaner.
- If the hood looks splotchy (stainless steel hood), use a stainless steel cleaner to clean the surface of the hood. Avoid getting cleaning solution on or into the control panel. Follow the directions of the stainless steel cleaner. CAUTION: Do NOT leave it on for too long as this may cause damage to the hood finish. Use a soft towel to wipe off the cleaning solution, gently rub off any stubborn spots. Use a dry soft towel to dry the hood.
- After cleaning, you may use non-abrasive stainless steel polish such as 3M® or ZEP®, to polish and buff out the stainless luster and grain. Always scrub lightly, with a clean cotton cloth, and with the grain.
- Do NOT allow deposits to accumulate or remain on the hood.
- Do NOT use ordinary steel wool or steel brushes. Small bits of steel may adhere to the surface and cause rusting.
- Do NOT allow salt solutions, disinfectants, bleaches, or cleaning compounds to remain in contact with stainless steel for extended periods. Many of these compounds contain chemicals which may be harmful. Rinse with water after exposure and wipe dry with a clean cloth. Cleaning grease filters / stainless steel filters less grill: IMPORTANT:
- Drain oil from oil containers before oil and residue overflow!
- The metal filters fitted by the factory are intended to filter out residue and grease from cooking. They need not be replaced on a regular basis but are required to be kept clean.
- Filters should be cleaned after every 30 hours of use. Remove and clean by hand or in the dishwasher. Use proper degreasing detergent for stainless steel and leave to soak if heavily soiled. Dry filters and re-install before using the hood.

# XtremeAIR USA HOOD TEN (10) YEARS MOTOR LIMITED WARRANTY

XtremeAIR USA Range Hood (hereunder called "The Company") warrants its product against defects in material or workmanship for the time periods as set forth below. **\*\*Note: for products purchased after January 2021\*\***

**PARTS:** For a period of one (1) year from the original date of purchase of product ("Parts Warranty"), The Company will supply new or equivalent replacement parts in exchange for parts determined to be defective. The motor warranty is extended for an additional nine (9) years to accumulate ten (10) years total (motor only).

**Labor:** For a period of one (1) year from the original date of purchase of the product ("Labor Warranty"), if the product is determined to be defective, The Company will repair or replace the product, at its option, at no charge. The Company will only cover labor performed at its facility. This warranty does not cover on-site labor costs. After the Labor Warranty period, labor charges are applicable.

**Warranty Performance:** In the event of any malfunction or defect covered under the terms of this warranty, immediately contact the company. Written notice of any malfunction or defect must be given within 7 days of the time of discovery of the malfunction and must be accompanied by the original consumer purchase receipt which shows the date of purchase.

**To obtain warranty service:** the products must be delivered, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the company authorized service facility as specified below. The repaired unit will be returned at The Company's expense.

1 (714) 554-9000

For specific instructions on how to obtain warranty service for your product, contact XtremeAIR USA by emailing [Support@XtremeAIRusa.com](mailto:Support@XtremeAIRusa.com)

**Repair/ Replacement Warranty:** This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period. Any part or product replaced under this Limited Warranty will become the property of The Company.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use and is non-transferable. It does not cover product issues caused by any other reason, including but not limited to: product issues due to commercial use, acts of God, misuse, defects resulting from damages sustained during shipping, unauthorized repair, modification of or to any part of the XtremeAIR product.

This Limited Warranty does not cover XtremeAIR products sold AS IS or WITH ALL FAULTS, light bulbs, remote control, normal maintenance and service, costs of removal or installation. This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product.

## **DISCLAIMERS**

*XtremeAIR USA shall not be responsible for loss of use or other incidental consequential costs, expenses or damages which may occur. Under no circumstances shall XtremeAIR USA or any of its representatives be held liable for injury to any person or damage to any property, however arising. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.*

*All Rights Reserved*

**XtremeAIR**

# TECHNICAL SPECIFICATION

	OTHER THAN DL08-W48	DL08-W48
Body Design	Non-Magnetic 1.0 mm Stainless Steel, Satin Finish	Non-Magnetic 1.0 mm Stainless Steel, Satin Finish
Power Rating	120V/60Hz (USA & Canada standard)	120V/60Hz (USA & Canada standard)
General Input Power	158W (150W + 4x2W)	308W (150W + 4x2W)
Motor Input Power	150 W each	150 W each
Ampere	1.3 A	2.6 A
Levels Of Speed Control	4 Levels	4 Levels
Maximum Airflow	900CFM	1600CFM
Noise Level	Approximately 1.5 — 6.0 sones or 33 — 54 dB	Approximately 3.0 — 7.0 sones or 41 — 56 dB
Number Of Motors	Single Motor	2 Motors
Motor Type	Single Chamber Ultra Quiet	Single Chamber Ultra Quiet
Fan Type	Squirrel Cage blower	2 Squirrel Cage blowers
Filtration Type	Heavy Duty Stainless Steel Baffle Filter	Heavy Duty Stainless Steel Baffle Filter
Illumination	2/3/4 LED lights, 2W Maximum/each	4 LED lights, 2W Maximum/each
Venting Size	Top 6 inches Round	Top 8 inches Round
Interference Protection	Radio Frequency Interference Protected	Radio Frequency Interference Protected
Note	Specification subject to change without notice.	Specification subject to change without notice.